



1. Identification/Recognition

A LACK OF MOTOR NOISE DOES NOT INDICATE THE SYSTEM IS OFF, A SILENT MOVEMENT CAPABILITY EXISTS UNTIL THE VEHICLE IS FULLY SHUT DOWN. ALWAYS WEAR APPROPRIATE PPE.



2. Immobilisation/Stabilisation/Lifting

Immobilise the Vehicle



A: Place in P position;
B: Make sure the EPB is applied (indicator ON);
C: Press the START/STOP Switch to shut down the power system.

Jacking or Lifting



Use caution to ensure you never come into contact with the fuel tank or harnesses while lifting or manipulating the vehicle.

3. Disabling Direct Haza						
The vehicle power system of the vehicle powe						
Power off and disconnect the negative cable of 12V low-voltage battery.						
ID Nr.	Version Nr.	Version date	page			
MG3	1.0	02/2024	Page 2 of 4			





4. Access to the Occupants





- Front window: Laminated glass
- Rear window: Tempered glass
- Four door : Tempered glass





Fully release the locking lever, the steering wheel can be adjusted in 2 directions.

- 1、Forward/Backward Adjustment
- 2、Cushion Height Adjustment *
- 3、Backrest Adjustment

5. Stored Energy / Liquids / Gases / Solids



- Wear a full set of insulated protection equipment and use specialized insulated tools.
- Continuously spray with a large amount of continuous water.
- To recover the vehicle, do not tow it directly, use a rescue vehicle instead.

ID Nr.	Version Nr.	Version date	page
MG3	1.0	02/2024	Page 3 of 4



7. In Case of Submersion

- Wear a full set of insulated protection equipment and use specialized insulated tools.
- To transfer the vehicle, do not tow it directly but use a recovery vehicle instead.

8. Towing / Transportation / Storage

- Personnel are prohibited from staying in the vehicle when towing and transporting the vehicle.
- When using a transporter to ship the vehicle always ensure the parking brake is applied, and the vehicle must be secured as illustrated.
- The vehicle can be towed from the site only when you make sure there is no safety risk. If the battery pack is deformed, leaks, smokes, etc., the safety risk should be solved first.
- Before towing the vehicle, switch on the hazard warning lamps, close all doors and lock the vehicle. The drive wheels MUST be suspended above the ground.
- When towing, DO NOT accelerate or brake suddenly, this can cause accidents.
- When it is necessary to temporarily push or tow the vehicle from a dangerous situation or onto the transporter, the speed must remain below 3 mph (5 km/h) and be completed within 3 minutes.



Please consult the Owner's Handbook for detailed instructions

10. Explanation of Pictograms Used							
	Flammable		Corrosives	**	Airconditioning component	Lifting point	Use thermal Infrared camera
×	Steering wheel, tilt control		Seat adjustment, longitudinal		Seat height adjustment	Use water to extinguish the fire	Hazardous to human health
	Explosive		Acute toxicity				

ID Nr.	Version Nr.	Version date	page
MG3	1.0	02/2024	Page 4 of 4